

Product Information

Food & Beverage

Magnetostrictive Liquid Level Transmitters



SANITARY BY DESIGN

Level Plus® LP-Series transmitters have been used in sanitary applications for over 30 years. With our extensive sanitary applications knowledge, we have developed a comprehensive line of options to configure our level transmitters to operate in almost any vessel. Our design has 3-A approval and our wetted parts are available in sanitary polish (Ra 25 µin., 0.64 µm) and electropolished (240 Grit/Ra 15) finish. Temposonics also offers numerous sizes of Tri-Clamp process connections as well as four different standard end plug designs. The NEMA housings are designed for cleanability and wash down applications with specially slotted and self-draining screwheads.

Overview

- Output
 - 4 to 20 mA
 - HART®
 - Modbus RTU
- 3-A Approval
- Sanitary Finish (Ra 25 µin., 0.64 µm)
- Electropolished Finish (Ra 15 µin., 0.38 µm)
- NEMA 4X Rated
- Wetted Parts 316L Stainless Steel or Nickel Alloy C-276
- Intrinsically Safe and/or Explosion Proof

CIP, SIP & AUTOCLAVE

Temposonics has liquid level transmitters installed in applications that utilize clean-in-place (CIP), steam-in-place (SIP), and autoclaves for sterilization. The hygienic design has allowed all of Temposonics's customers to validate the cleanability of the wetted parts of the level transmitter in their processes. The customers are across multiple sanitary industries including pharmaceutical, biotechnology, and food & beverage. A unique design feature of the LP-Series is the ability to remove all the electronics without removing the wetted parts from the tank or breaking the seal on the tank. With the electronics removed the wetted parts can be kept in the tank at elevated temperatures without any risk to damaging the electronics or having to open the tank and risk contamination.



Fig. 1: SoClean® transmitter

MEASUREMENT IN HARSH CONDITIONS

No other technology offers better accuracy under harsh conditions than magnetostrictive technology. The SoClean® level transmitter is immune to the effects of foaming, misting, steam, condensation, and agitation. Temposonics is also not affected by changes in dielectric constant as liquids change during a mixing process. The secret to the success is that the sensing element for magnetostrictive technology is isolated from the process inside of the pipe and this allows for better performance in harsh applications. Stop wasting time and money on recalibrating and recommissioning the wrong level technology. Move to a better product and use Temposonics level transmitter.

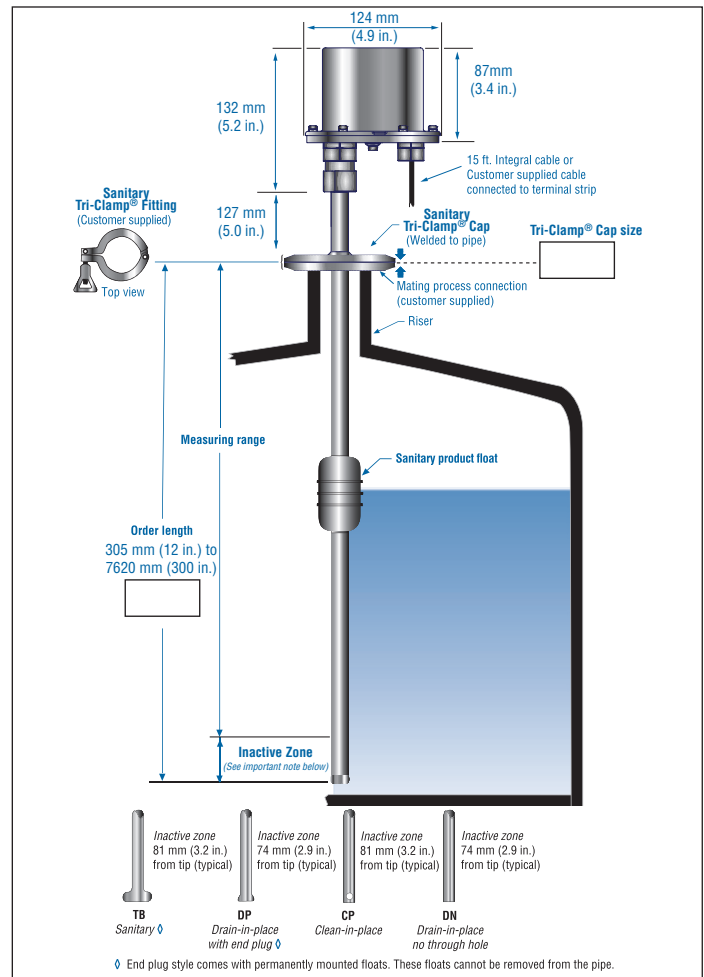


Fig. 2: Sanitary Pipe Installation and Mounting Reference

INVENTORY MONITORING OF SPIRITS

Nobody likes paying taxes and absolutely nobody likes paying more taxes than they need to. Distilleries in the US are required to pay tax on their production volume and not their sales volume. To help minimize taxes the distilleries faced a difficulty of needing an accurate level transmitter that could be used in a hazardous area on large storage tanks. Temposonics and the Tank SLAYER® were able to meet the requirements by providing an intrinsically safe rating, +/- 1 mm inherent accuracy, and an order length up to 72.2 feet (22 m). The accuracy of the Tank SLAYER was able to help the distilleries to save on wasted product and wasted taxes. The complete construction of 316 stainless steel (1.4404) allowed for a cleanable service and no concerns about product contamination.



Fig. 3: Stainless Steel Wine Barrels (Designed by Bearfotos / Freepik)

LEVEL MEASUREMENT THROUGH FOAM

Beer enthusiasts enjoy a nice head of foam on top of their favorite pint. However, very few level measurement technologies can detect a liquid level under a layer of foam. Magnetostrictive level technology is one of the technologies that can measure through foam and is also approved for use in sanitary applications. Foam is not the only difficulty that has to be overcome in some brewery applications as there can also be carbon dioxide blankets, mixing, and/or outgassing. Despite the difficulties Temposonics and the SoClean level transmitter can perform with no loss of accuracy.

BOTTLE FILLING MACHINES

Temposonics level transmitters are installed on different types of bottle fillers including gravity feed flow and piston bottler fillers. On gravity feed flow bottle fillers the level transmitter is used to accurately monitor the liquid level in filler bowl(s). The filler bowl is a holding tank that is used for gravity feed flow control for the dispensing of liquids into bottle based on maintaining a constant liquid level that uses the weight of the liquid to control the dispensing rate and avoid over- or under-filling the bottles. Depending on the liquid being dispensed foam, spray, and mist can be generated in the filler bowl and cause interference with the level

measurement but the Temposonics level transmitters maintain accuracy because the sensing element is enclosed in the sanitary pipe and does not come in direct contact with the liquid.



Fig. 4: Bottle Filling Machine

Temposonics level transmitters are also used in piston bottle filling machines. The Temposonics transmitter is mounted on or in the piston to allow for accurate and repeatable movement of the piston and accurate and reliable filling of the bottle. Temposonics has an array of transmitters that work in this high-speed application with fast update rates and machine protocols including serial communication (DeviceNet, Profibus DP, SSI) and Ethernet communication (Ethernet IP, EtherCat, ProfiNET, Powerlink).

OTHER APPLICATIONS

Temposonics has mentioned only a few of the possible applications where level transmitters can be used. There are hundreds of more applications and the only limitation is the creativity in applying the technology.

Temposonics can be used for storage, mixing, dosing, monitoring, overflow prevention, and many other types of applications. If you have an idea and would like to discuss it please contact Temposonics at the contact information on the back cover.

NO MAINTENANCE

The LP-Series is designed for simplicity and ease of use. Once the level transmitter is installed in the tank it should not have to be removed. Temposonics does not require recalibration or routine maintenance. If something does go wrong the level transmitters are designed to be fully field replaceable. This means if the electronics or the sensing element becomes damaged, they can easily be replaced from the top of the vessel without removing the pipe assembly. This design has been developed to reduce downtime or draining the tank.

UNITED STATES
Temposonics, LLC
Americas & APAC Region
3001 Sheldon Drive
Cary, N.C. 27513
Phone: +1 919 677-0100
E-mail: info.us@temposonics.com

GERMANY
Temposonics
GmbH & Co. KG
EMEA Region & India
Auf dem Schüffel 9
58513 Lüdenscheid
Phone: +49 2351 9587-0
E-mail: info.de@temposonics.com

ITALY
Branch Office
Phone: +39 030 988 3819
E-mail: info.it@temposonics.com

FRANCE
Branch Office
Phone: +33 6 14 060 728
E-mail: info.fr@temposonics.com

UK
Branch Office
Phone: +44 79 44 15 03 00
E-mail: info.uk@temposonics.com

SCANDINAVIA
Branch Office
Phone: +46 70 29 91 281
E-mail: info.sca@temposonics.com

CHINA
Branch Office
Phone: +86 21 2415 1000 / 2415 1001
E-mail: info.cn@temposonics.com

JAPAN
Branch Office
Phone: +81 3 6416 1063
E-mail: info.jp@temposonics.com

Document Part Number:
552028 Revision A (EN) 11/2022



[temposonics.com](https://www.temposonics.com)